

HONDA TYPE-R 3EP MECHANICAL GEARBOX

EXPLODED VIEWS



Plant adress:


**Kodasema
Roosna-Alliku parish
Järvamaa
Estonia**

E-Mail adress:

margus.bollverk@mail.ee

Mechanical gearbox
Honda Type-R 3EP
Exploded views


Primary geartrain

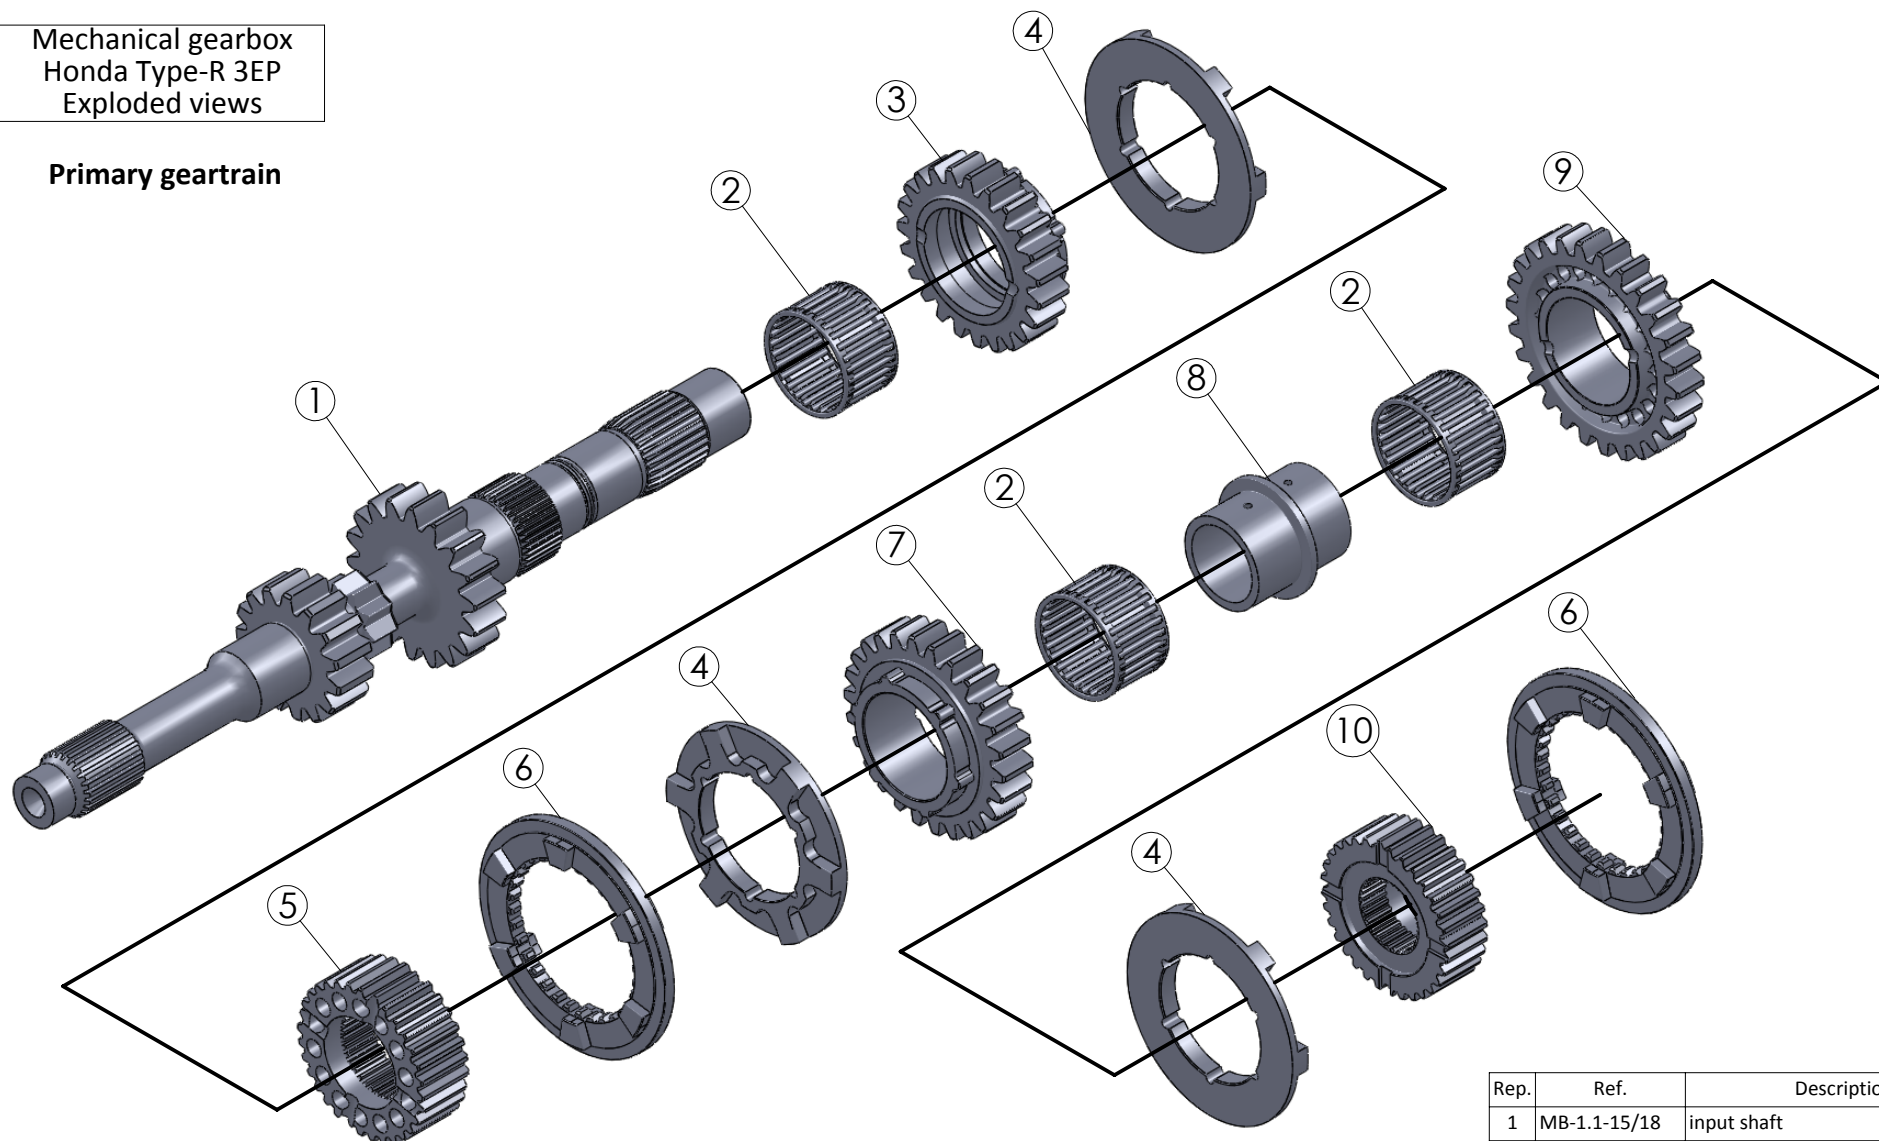

Rep.	Ref.	Description	Qty
1	MB-1.1-15/18	input shaft	1
2	MB-K38X43X27	needle bearing 3/4/5 gear	3
3	MB-1.3-23	input shaft, 3rd gear, 23t	1
4	MB-HLP-3-4-5	gear ratio dogplate, 3rd, 4th, or 5th	3
5	MB-LM-3/4	selector 3rd/4th gear	1
6	MB-LMS-3/4/5	holding hub selector 3rd/4th or 5th	2
7	MB-1.4-26	input shaft, 4th gear, 26t	1
8	MB-JP-4/5	holding hub driven ratio 4/5	1
9	MB-1.5-28	input shaft, 5th gear, 28t	1
10	MB-LM-4/5	selector 4th/5th gear	1

Mechanical gearbox
Honda Type-R 3EP
Exploded views


Secondary geartrain

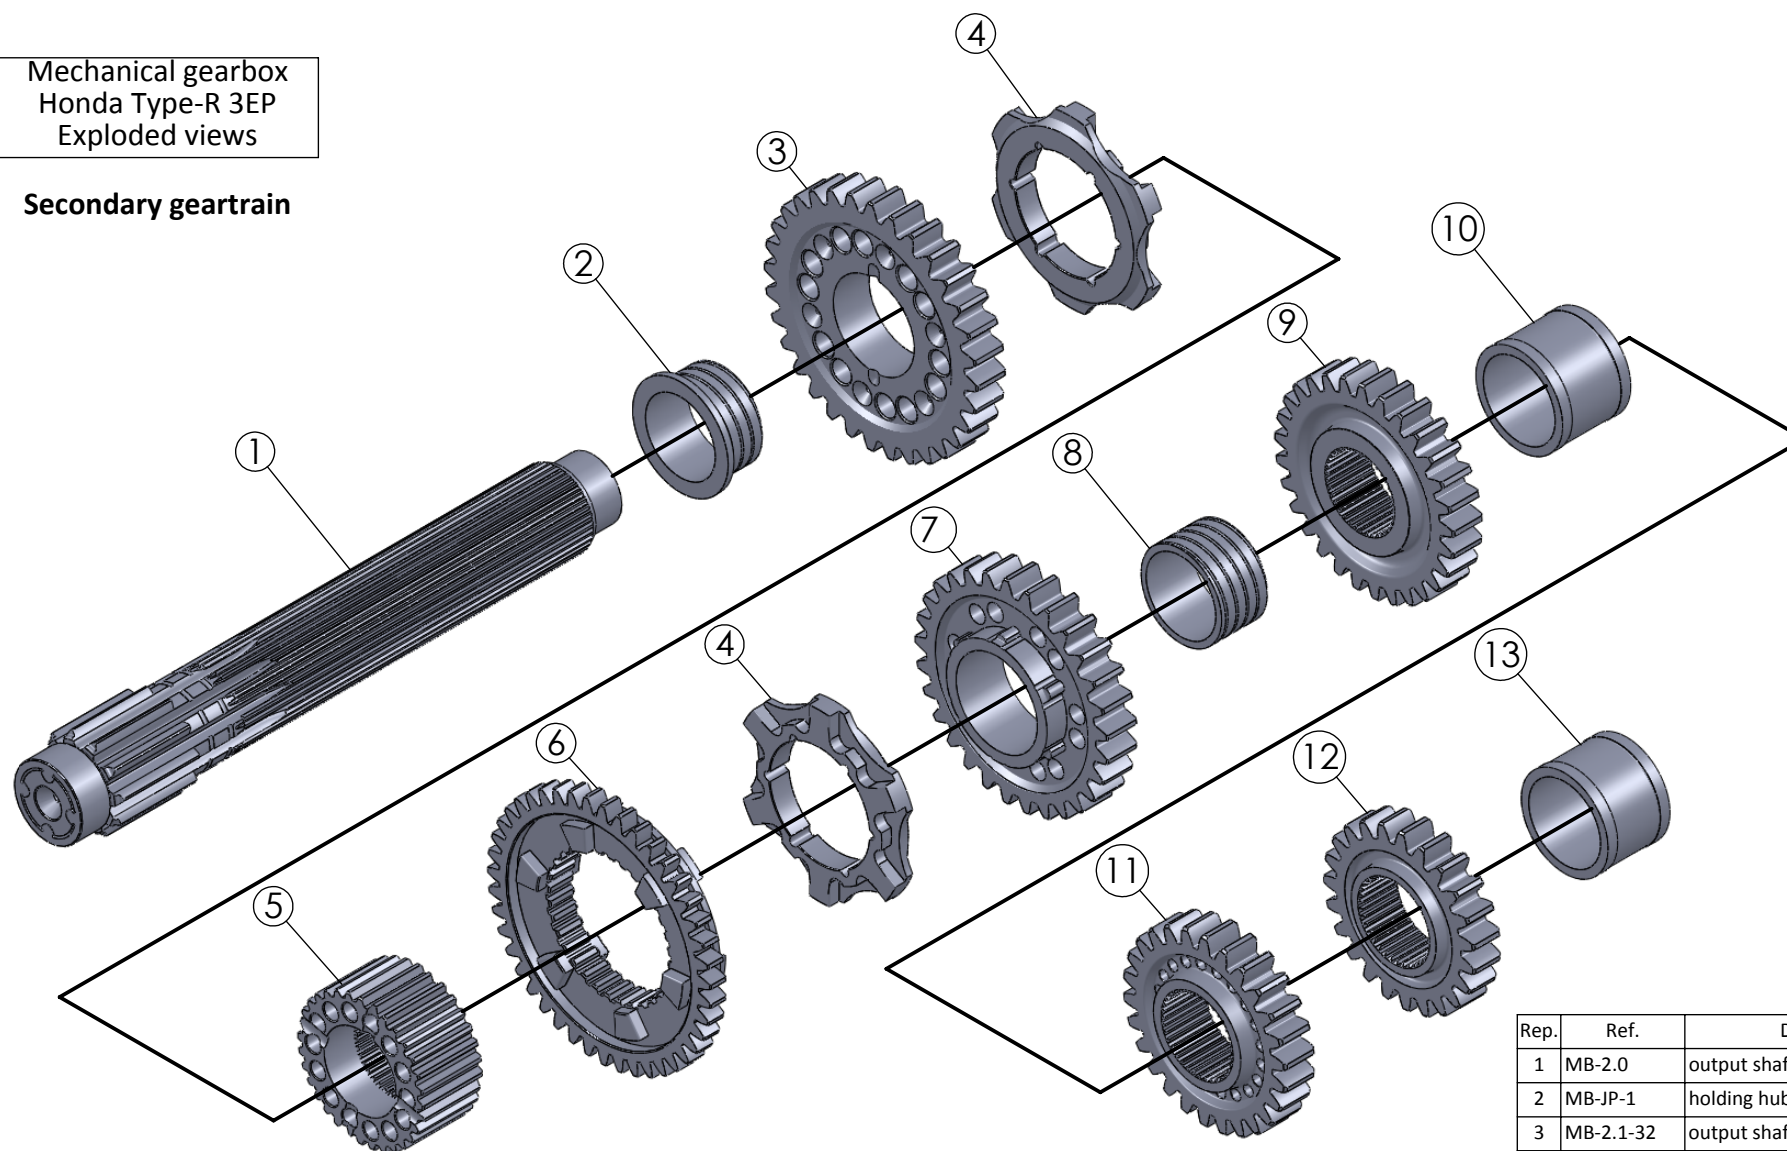

Rep.	Ref.	Description	Qty
1	MB-2.0	output shaft	1
2	MB-JP-1	holding hub driven ratio 1st	1
3	MB-2.1-32	output shaft, 1st gear, 32t	1
4	MB-HLP-1-2	gear ratio dogplate 1st or 2nd	2
5	MB-LM-1/2	selector 1st/2nd gear	1
6	MB-LMS-1/2	holding hub selector 1st/2nd	1
7	MB-2.2-29	output shaft, 2nd gear, 29t	1
8	MB-JP-2	holding hub driven ratio 2nd	1
9	MB-2.3-29	output shaft, 3rd gear, 29t	1
10	MB-001	outing shaft distance spacer 3/4	1
11	MB-2.4-26	output shaft, 4th gear, 26t	1
12	MB-2.5-24	output shaft, 5th gear, 24t	1
13	MB-002	outing shaft distance spacer 5th	1

Mechanical gearbox
Honda Type-R 3EP
Exploded views

Selector

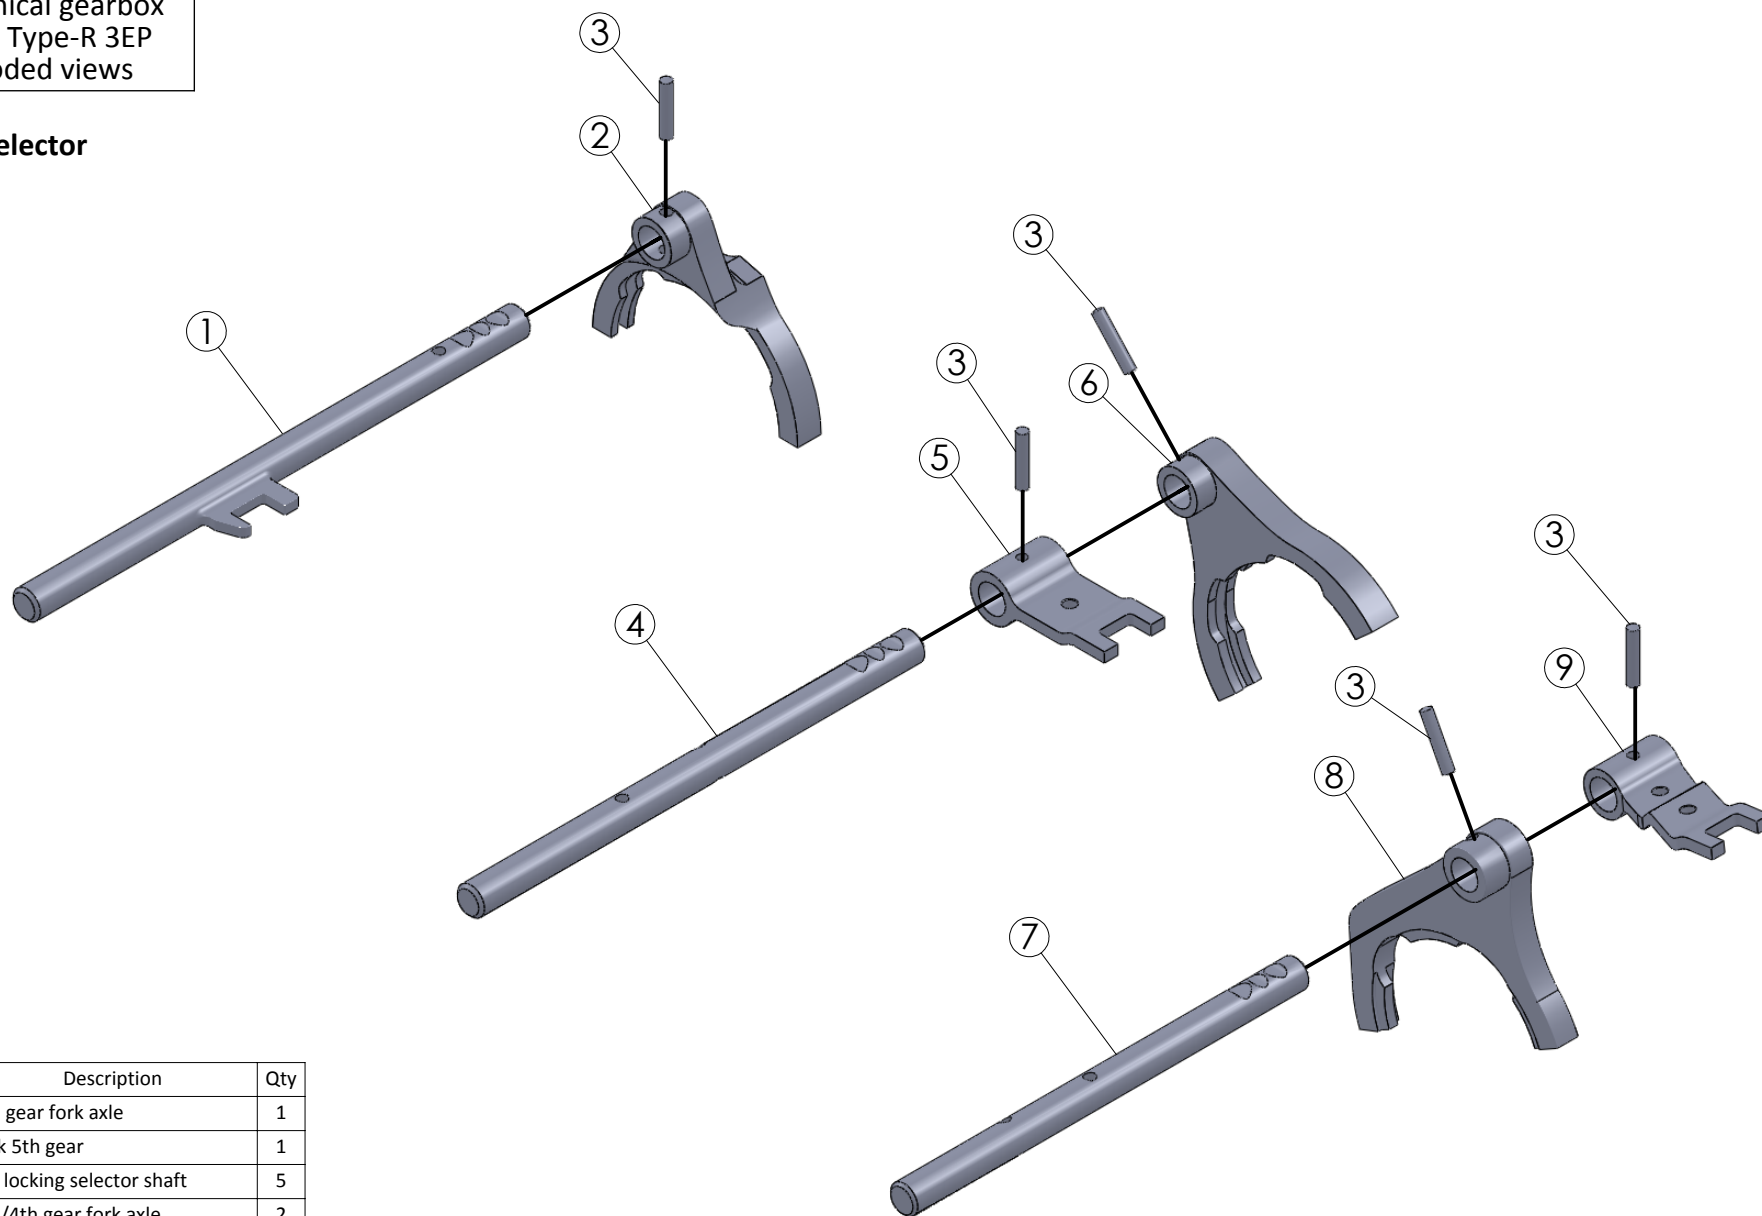

Rep.	Ref.	Description	Qty
1	MB-LR-5	5th gear fork axle	1
2	MB-LK-5	fork 5th gear	1
3	MB-003	pin locking selector shaft	5
4	MB-LR-3/4	3th/4th gear fork axle	2
5	MB-004	3rd/4th gear detail	1
6	MB-LK-3/4	fork 3rd - 4th gear	1
7	MB-LR-1/2	1st/2nd gear fork axle	1
8	MB-LK-1/2	fork 1st - 2nd gear	1
9	MB-005	1st/2nd gear detail	1